

OREGON®

PS750 POLE SAW

Quick Start Instructions

What's in the Box?

The pole saw requires some assembly before use. These items ship with the pole saw:

- 1) Pole Saw
- 2) Guide Bar
- 3) Saw Chain
- 4) Side Cover
- 5) Blade Cover
- 6) Harness
- 7) Instruction Manual

After removing the pole saw from the box, inspect it carefully to ensure no damage has occurred during shipping and that no parts are missing. If any parts are damaged or missing, do not use the pole saw. Contact Oregon® to obtain replacement parts. For country-specific telephone numbers, see "Customer Service by Country".



IMPORTANT SAFETY NOTICE

Wear protective gloves when handling pole saw chain.



This sheet is meant to be a supplement, not a replacement for your operator's manual.

ATTENTION! Bar and chain oil prevents premature wear. Never operate the pole saw if oil is not visible. Check oil level frequently and fill as needed.

ATTENTION! SAFETY NOTICE

Unplug the pole saw



FILLING THE BAR AND CHAIN OIL RESERVOIR

STEP 1: Place the pole saw on its side on a firm, flat surface, so that the oil cap (A) is on top.

- Clean any debris from the cap area.
- Remove the cap.
- Carefully pour 60 l of bar and chain oil into the reservoir.

If the reservoir is totally full on initial startup, it can slow down the prime. We suggest 90% full.



STEP 2: Replace the cap (A) and make sure oil is visible in the reservoir (B).

If oil is not visible in the reservoir, additional bar and chain oil is necessary.



ASSEMBLING THE GUIDE BAR AND SAW CHAIN

STEP 3: Loosen the side cover release knob (A) slightly. Do not fully remove the side cover.



STEP 4: Loosen the chain tensioning ring (B) as far as it will go.




STEP 5: Fully loosen the side cover release knob and remove the side cover.




OREGON®

PS750 POLE SAW


Quick Start Instructions

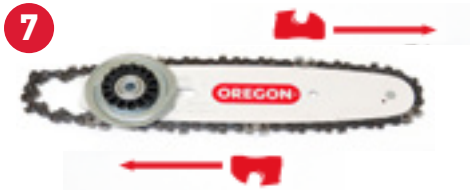


STEP 7: Loop the new saw chain onto the drive sprocket and the bar so that the cutters are facing the correct direction.

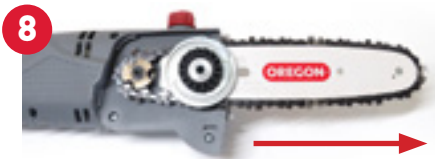

STEP 8: Feed the chain into the groove of the bar and slide the bar away from the motor to remove slack from the chain.

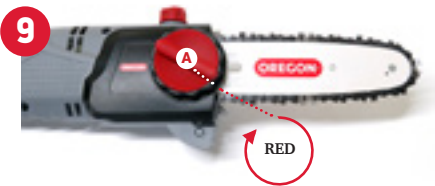

STEP 9: Install the side cover, making sure the chain catcher and side cover tab are seated in their proper locations, then lightly tighten the side cover release knob. **ATTENTION!** Follow the tensioning the saw chain guidelines to tension the chain before use.

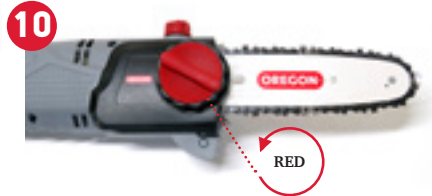

TENSIONING THE SAW CHAIN

STEP 10: Loosen the side cover release knob slightly, but do not remove the side cover.



STEP 11: Hold up the nose of the guide bar and turn the chain tensioning ring to tighten the chain.



STEP 12: Tighten the chain tensioning ring until the lowest cutters underneath the bar solidly contact the bar.



STEP 13: Tighten the side cover release knob.



ATTENTION! Saw chain tension is correct when, with some effort, a gloved hand can pull the chain smoothly around the bar. The chain should touch the underside of the bar rail.

After a short period of use, allow the chain to cool, unplug the pole saw and check the tension again. Watch tension carefully for the first half-hour of use and periodically throughout the life of the chain readjusting as required when the chain and bar are cool to the touch. Never tension chain when it is hot.

Chain will stretch as a result of normal use, however, insufficient oil, aggressive use, or failure to perform recommended maintenance can lead to premature stretching.

OREGON™